




Installation

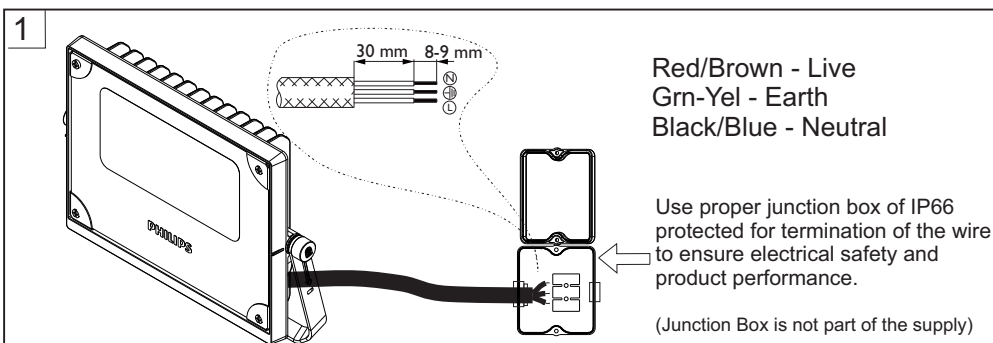

2 Adjust the aiming of the luminaire and tighten the mounting screws on the side for locking in position using a torque of 8 N-m.

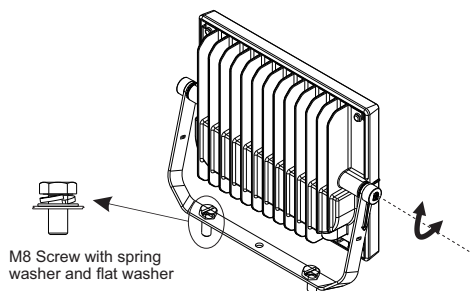

3 Caution: Gland shall never be above the centre line.

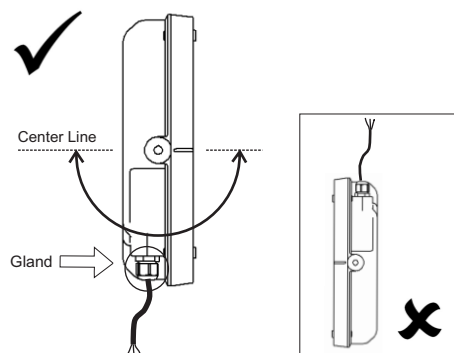

All the pictures in the MI sheet are representative only and may vary from the actual product.

Installation Instruction

BVP 282

Flood Lighting Luminaire

Type	:	BVP282
Light Source	:	LED's
Voltage	:	240V, 50-60 Hz
IP Classification	:	IP-66
Net Weight	:	2.4 kg
Application	:	Outdoor use only

Warning

1. The luminaire shall be installed by a qualified electrician.
2. Turn power off before inspection, maintenance, installation or removal.
3. Refer to technical datasheet for additional electrical properties to ensure safe installation.
4. Luminaire installed must not be in contact with combustible materials.
5. Ensure power supply cables (L-N-E) are connected correctly before Switching on.
6. The connection of power cable on luminaire is type Y. If the external flexible cable or cord of the luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid hazard.
7. The light source of this luminaire is not replaceable, when the light source reaches its end of life the whole luminaire shall be replaced.
8. Warranty void if earthing is not connected.





Maintenance

1. Periodic cleaning of the luminaire glass cover will ensure max. optical Efficiency.
2. Luminaire glass cover shall be cleaned with water and non-abrasive soap, cleaner or detergent solution.

Caution

1. The luminaire must be used within the applicable product specifications, installation instructions and environmental conditions for storage & operations according to applications guidelines provided by Philips for product Warranty to be valid.
2. In case the front glass is found broken/ damaged, it should not be powered on and is to be replaced before using the luminaire.

All the pictures in the MI sheet are representative only and may vary from the actual product.

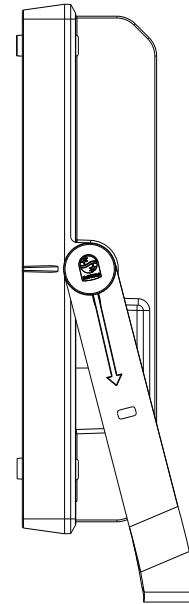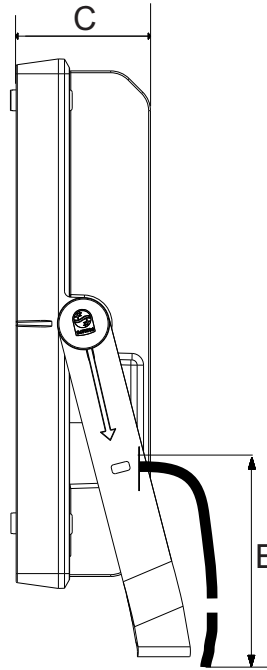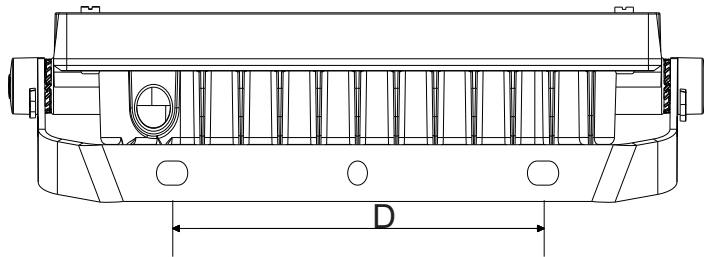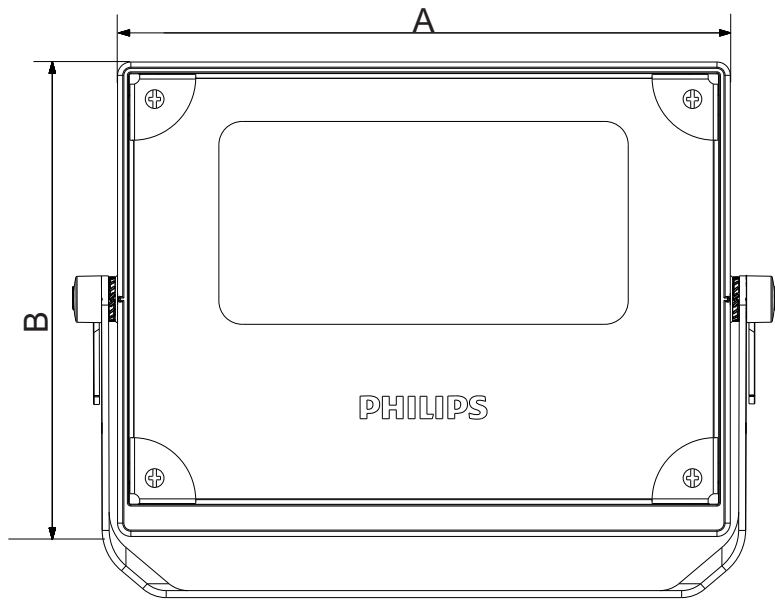

Mounting Angle

Note: Mounting Screw Size : M8

All dimensions are in mm.

Type	A	B	C	D	E
100W	264	203	52	160	300