
Smart Bright Solar All-in-One Street Light

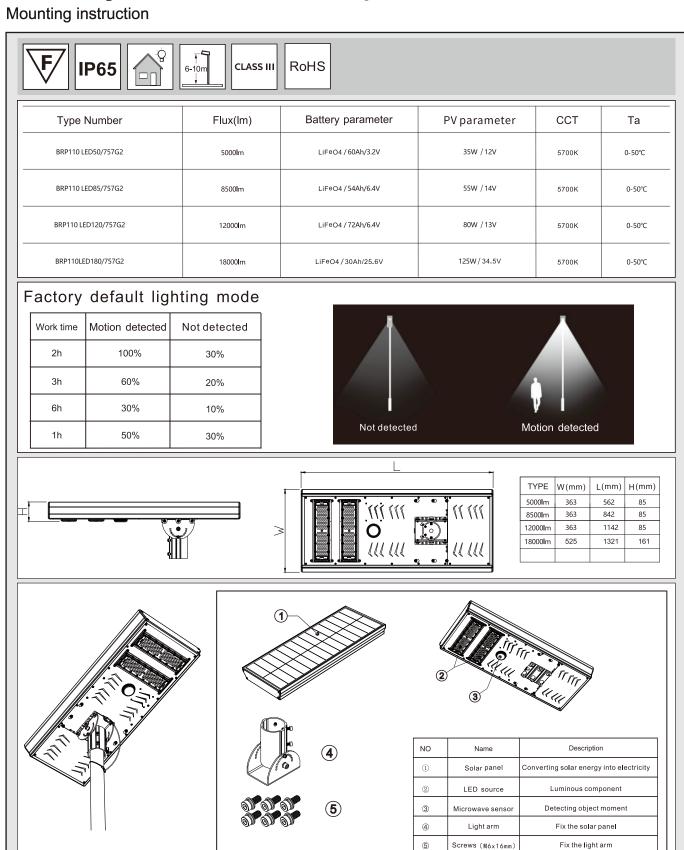



地址: 上海市闵行区台川路2555号1幢二 邮编: 201801




Prevent lamps from falling

6


Safety rope

Installation

Note: Luminaire is in sleep mode as factory default setting. It will wake up automatically after 10S charge under sunlight.

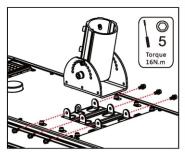


The lamp arm installation
18000lm skip this step

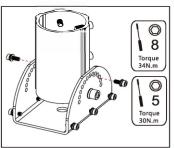

2.Adjust PV tilt angle: unscrew the screws, adjust the angle, then screw up the screws




3a.Adjust LED light Angle: 5000lm, 8500lm, 12000lm

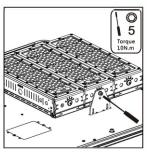


3b.Adjust LED light angle(±8°)



4.Install on pole

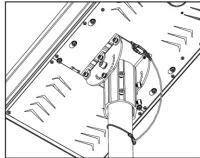

5a.Installation with safety rope: 5000lm, 8500lm, 12000lm

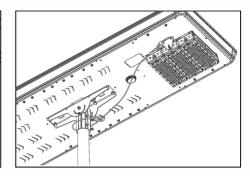

5b. Installation with safety rope: 18000lm

Application notes

- 1. Solar panel orientation, solar panel should face south in north hemisphere, face north in south hemisphere.
- 2. Try to install in a sunny place that is not shaded by trees, building, walls etc. so that the Solar panel receive maximum sunlight for charging the battery.
- 3. Product storage temperature:-10-60°C; Charge temperature: 0-45°C; Discharge temperature:-10-60°C.
- 4. This product can withstand a class 14 typhoon, and storms above class 14 may damage to the product.
- 5. The products can be stored up to 6 months. In case it is required to store more than 6 months, it is recommended to re-charge the product in bright daylight.
- 6. Sensor indicator light status description.

| Indicator light | Indicator light status | Indicator light status | Remote control system status |
|-----------------|------------------------|------------------------|--|
| Red | On | Normal working | Discharge |
| | Flash slowly | Charging | Charging |
| | Flash fastly | System failure | Short circuit/open circuit/over discharge / EBMS over temperature |